

Gummibär & Friends

The
GUMMY BEAR SHOW



DOUBLE-SIDED Target Bag

Candy & Dance Party

THE MANUAL



INFLATABLE
DUDES®

Gummibär
& Friends
The
GUMMY BEAR SHOW



HOW TO USE YOUR GUMMIBÄR & FRIENDS TARGET BAG





An electric or hand pump is recommended.

HOW TO INFLATE


1 Use a pump to fill the first valve with air. Once filled, close the valve cover.

2 Blow air into the second valve until it is full. Push the valve down firmly into the punching bag, then close the valve cover.

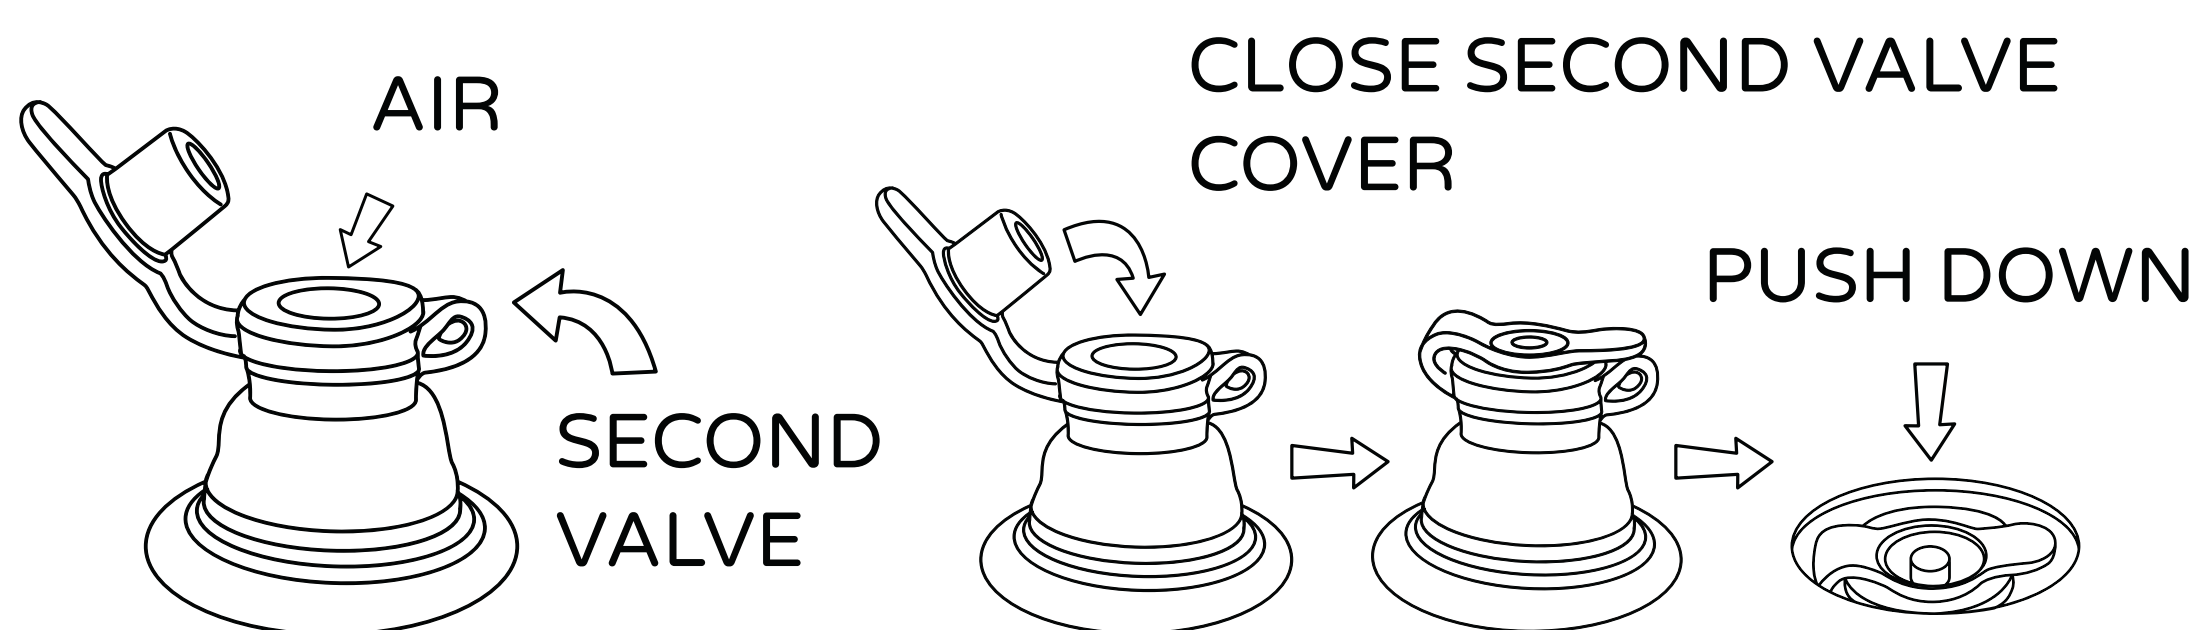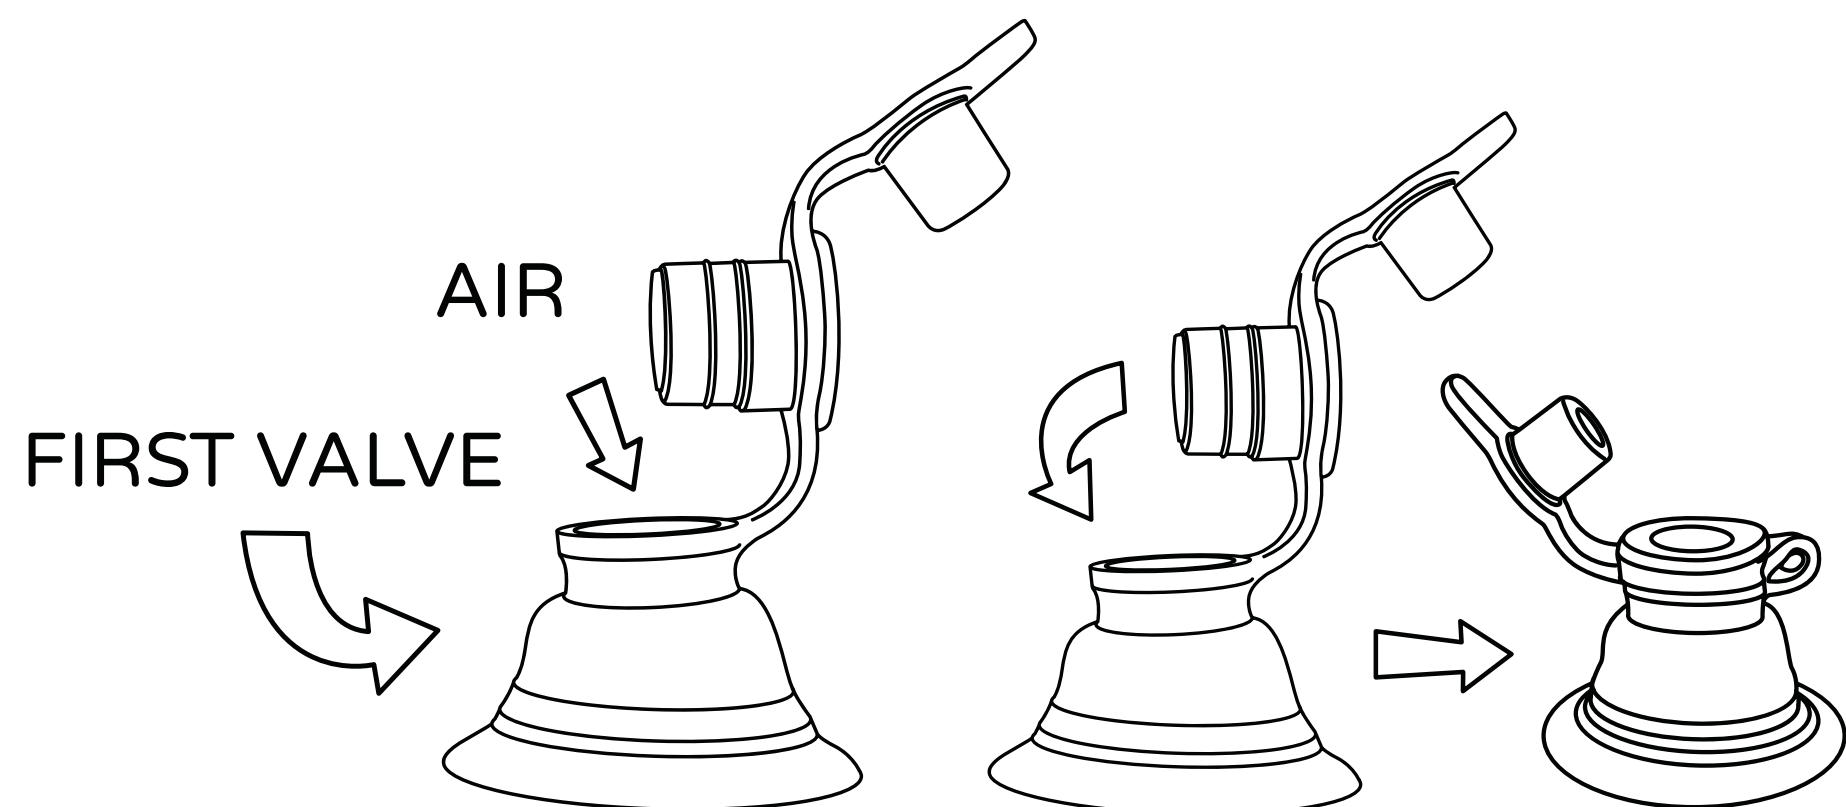

HOW TO DEFLATE

1 Pull out all the air valves from the punching bag. Open each valve completely to let the air escape.

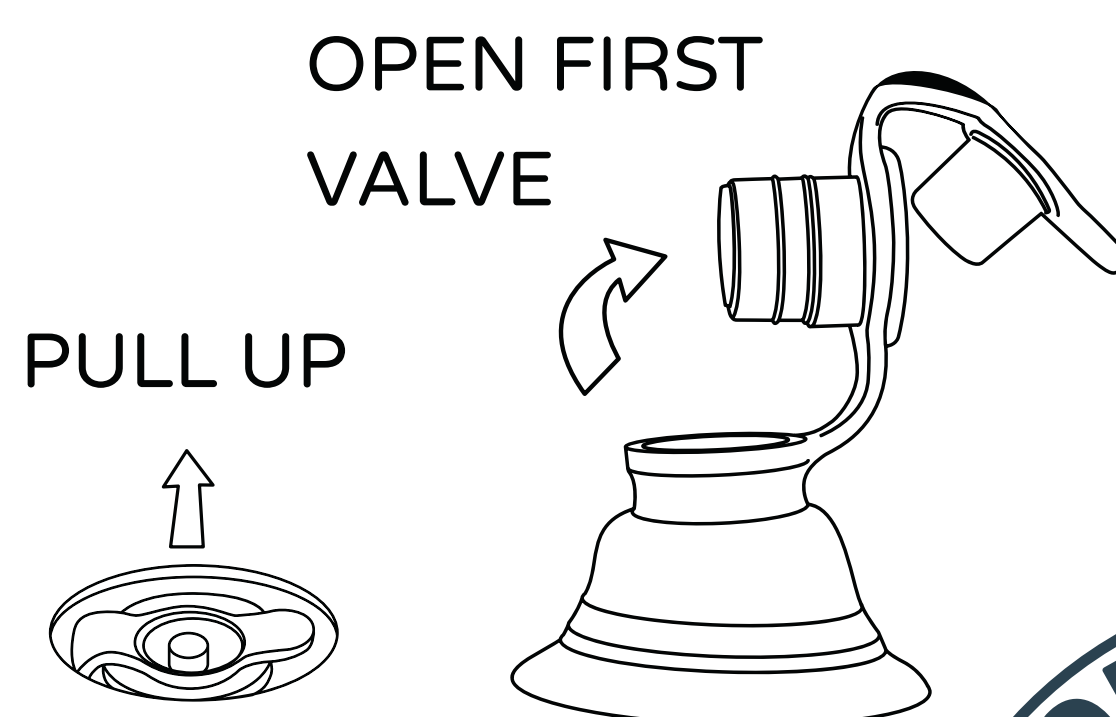



MAINTENANCE AND CARE TIPS

RECOMMENDED INFLATION LEVELS

DON'T OVER INFLATE.

If the seams look like they're stretching or bulging, let a little air out. Overinflation can make your Gummibär & Friends Target Bag feel too tight, putting stress on the seams.




DON'T UNDERINFLATE.

If your Gummibär & Friends Target Bag is sagging or looks a bit floppy, it's time to add a few more puffs of air!



PROPER INFLATION.

Your Gummibär & Friends Target Bag should feel firm but have a little give when pressed, standing tall and smooth without sagging or bulging. This ensures the perfect balance for fun and durability!

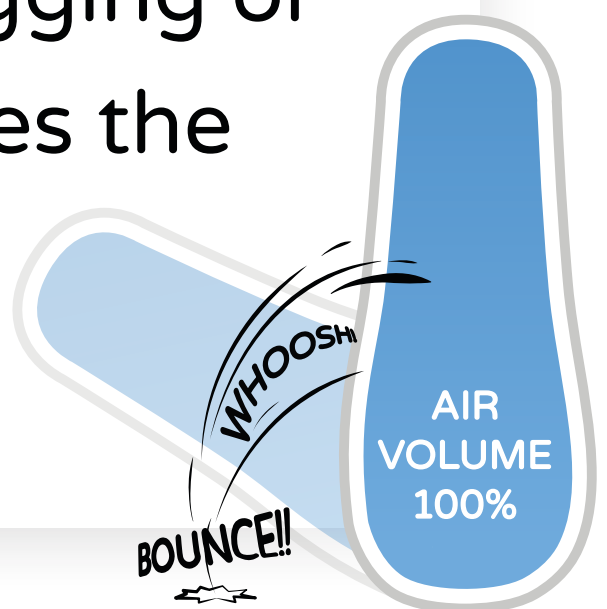

CARE TIPS

PICK IT UP, DON'T DRAG.

Keep your Gummibär & Friends Target Bag safe by lifting it instead of dragging across rough ground. This helps avoid wear and tear on the bottom.

BE GENTLE WITH THE ARMS.

Don't pull, tug, or twist the arms or features—they're not built for that kind of action! Pulling on them can cause leaks or weakened seams.

KEEP SHARP THINGS AWAY.



Sharp objects like pins, scissors, or rocks can tear the material, so always make sure your Gummibär & Friends Target Bag's play area is free of them.

SUPERVISE THE FUN.

Kids should be bouncing, punching, and playing—but not standing or jumping on the Gummibär & Friends Target Bag. For sitting, make sure it's no more than 100 lbs.

PLAY ON SMOOTH SURFACES.

Grass, carpet, or soft mats are the best spots for your Gummibär & Friends Target Bag. These smooth surfaces help it stay in top shape.

KEEP IT COOL (OR WARM!)

Don't use or store your Gummibär & Friends Target Bag in temperatures over 120°F or under 32°F. Extreme heat or cold can mess with the material, so store it in a cool, dry place to keep it lasting longer.

KEEP IT CLEAN, KEEP IT FUN.

Use a soft cloth with mild soap and water to wipe down your Gummibär & Friends Target Bag—no harsh cleaners or scrubbers, please!



INFLATABLE DUDES® PROMISE

Defective product?

We stand behind the quality of our Inflatable Dudes® and offer a 100% money-back guarantee or exchange within 90 days of purchase. If you're not fully satisfied, please contact us at contact@theinflatabledudes.com to begin the return or exchange process.



Warranty and customer support are provided by Inflatable Dudes®

Within Retailer's Return Window:

If your purchase was made through Amazon.com, Walmart Marketplace, or another authorized retailer, please process your return directly through their platform or store. Each retailer's return policy applies first and may have different time limits (for example, Amazon and Walmart allow 30 days).

After Retailer's Return Window:

Once the retailer's return window has closed, please contact us directly at contact@theinflatabledudes.com. Inflatable Dudes® are covered by our 90-Day Manufacturer Warranty for exchange or refund. Retailers are not responsible for warranty claims after their return period ends.



Activate Your Extended Warranty!

Thank you for purchasing your Inflatable Dudes® Gummibär & Friends Target Bag! For added protection, register for an **extended warranty** within **14 days** of purchase. Simply follow the



1. Visit <https://theinflatabledudes.com/extended-warranties/>

2. Pay for your warranty (if applicable).

Note: You may need to provide your order details for verification.

**6 MONTHS
EXTENDED
WARRANTY**



**1 YEAR
EXTENDED
WARRANTY**

Hurry! You have 14 days to activate your warranty.

Don't miss out on peace of mind—register today!

BONUS

This Inflatable Dudes® Gummibär & Friends Target Bag comes with a repair patch.

VINYL REPAIR PATCH

1. Clean and dry the repair area.
2. Cut the patch to the desired size.
3. Peel the backing and firmly press the patch over the hole.
4. Wait 30 minutes before use.



The Repair Patch can seal holes and tears.

PARENTS AND KIDS LOVE THIS!

It helps prolong the life of their favorite toys.



Warranty and customer support are provided by
Inflatable Dudes®

Something wrong? Contact us.
contact@theinflatabledues.com

WE'RE HERE TO HELP!



Gummibär & Friends is a registered trademark of
Toonz Media Group and Gummybear International Inc.
All Rights Reserved. CPSC Approved. © 2026 GBP.

Produced by Inflatable Dudes® as an official licensee of Gummibär & Friends.